

High-Voltage System


From December 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Hybrid Battery Unit, Hybrid Battery Recirculation Door Positioning Motor 1

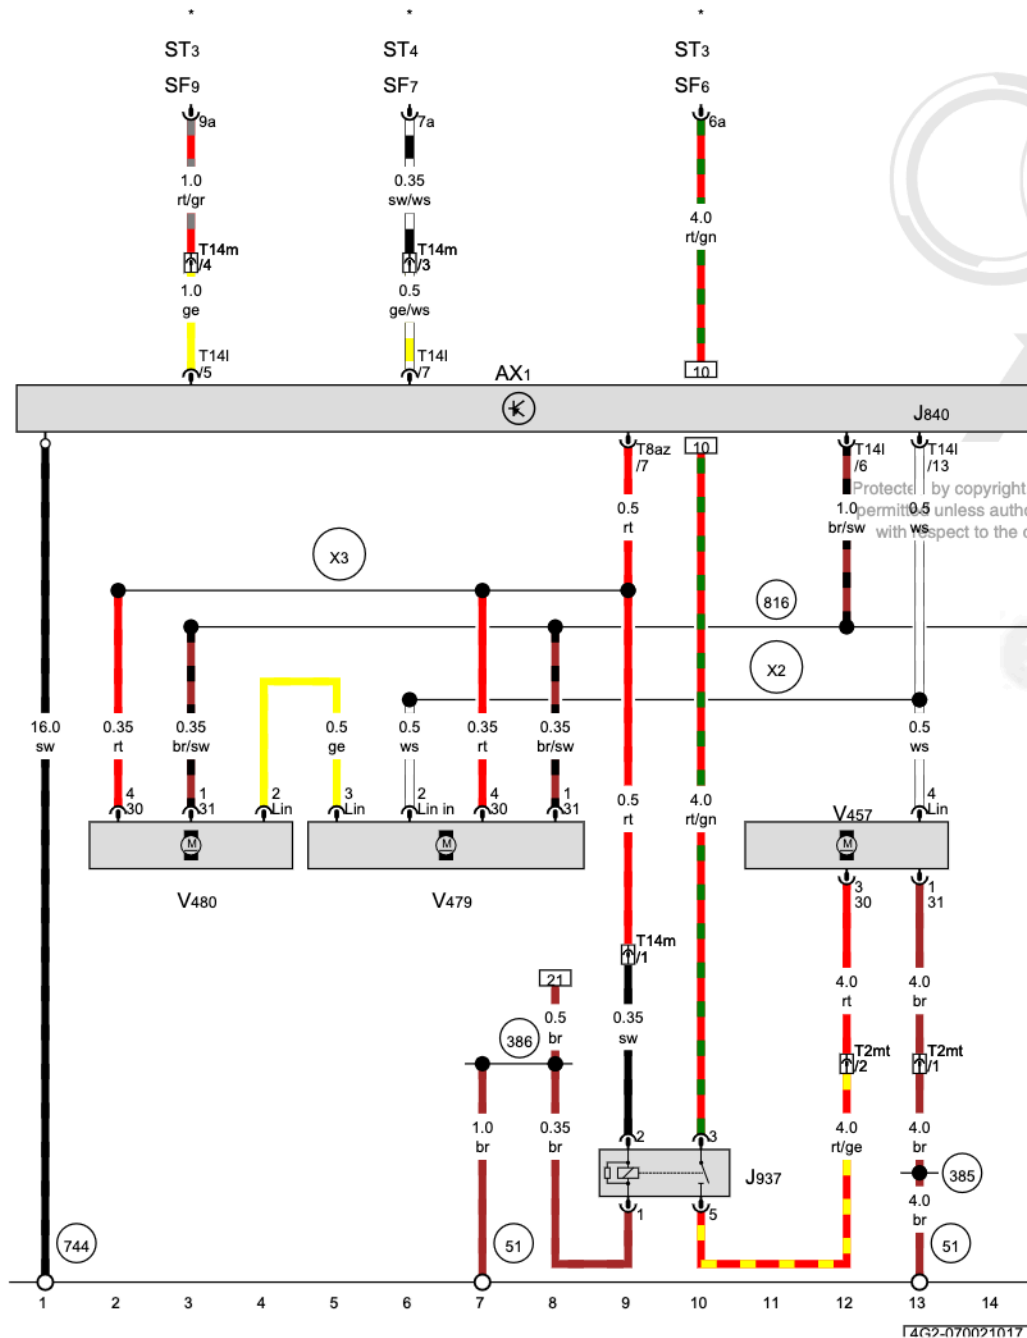

- AX1 Hybrid Battery Unit
- J840 Battery Regulation Control Module
- J937 Fan Activation Relay, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST3 Fuse Panel 3
- ST4 Fuse Panel 4
- SF6 Fuse 6 (On Fuse Panel F)
- SF7 Fuse 7 (On Fuse Panel F)
- SF9 Fuse 9 (On Fuse Panel F)
- T2mt 2-Pin Connector, In the Luggage Compartment, Spare Wheel Well
- T8az 8-Pin Connector
- T14l 14-Pin Connector
- T14m 14-Pin Connector, In the Luggage Compartment, Spare Wheel Well
- V457 Battery Fan 1
- V479 Hybrid Battery Recirculation Door Positioning Motor 1
- V480 Hybrid Battery Recirculation Door Positioning Motor 2


- 51 Ground Connection in Luggage Compartment, Right
- 385 Ground Connection 20 (in Main Wiring Harness)
- 386 Ground Connection 21 (in Main Wiring Harness)
- 744 Ground Connection in Spare Tire Well
- 816 Ground Connection 1 in Hybrid System Wiring Harness
- X2 LIN Bus Connection 1 (in Hybrid System Wiring Harness)
- X3 Connection 1 in Hybrid System Wiring Harness

* Refer to Applicable Wiring Diagram for Fuse Positions


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Hybrid Battery Unit, Hybrid Battery, Temperature Sensor Before Hybrid Battery Evaporator, Temperature Sensor After Hybrid Battery Evaporator, Hybrid Battery Refrigerant Shut-Off Valve 1

- AX1 Hybrid Battery Unit
- A38 Hybrid Battery
- G756 Temperature Sensor Before Hybrid Battery Evaporator
- G757 Temperature Sensor After Hybrid Battery Evaporator
- J840 Battery Regulation Control Module
- N516 Hybrid Battery Refrigerant Shut-Off Valve 1
- T8az 8-Pin Connector
- T14l 14-Pin Connector
- T14m 14-Pin Connector, In the Luggage Compartment, Spare Wheel Well

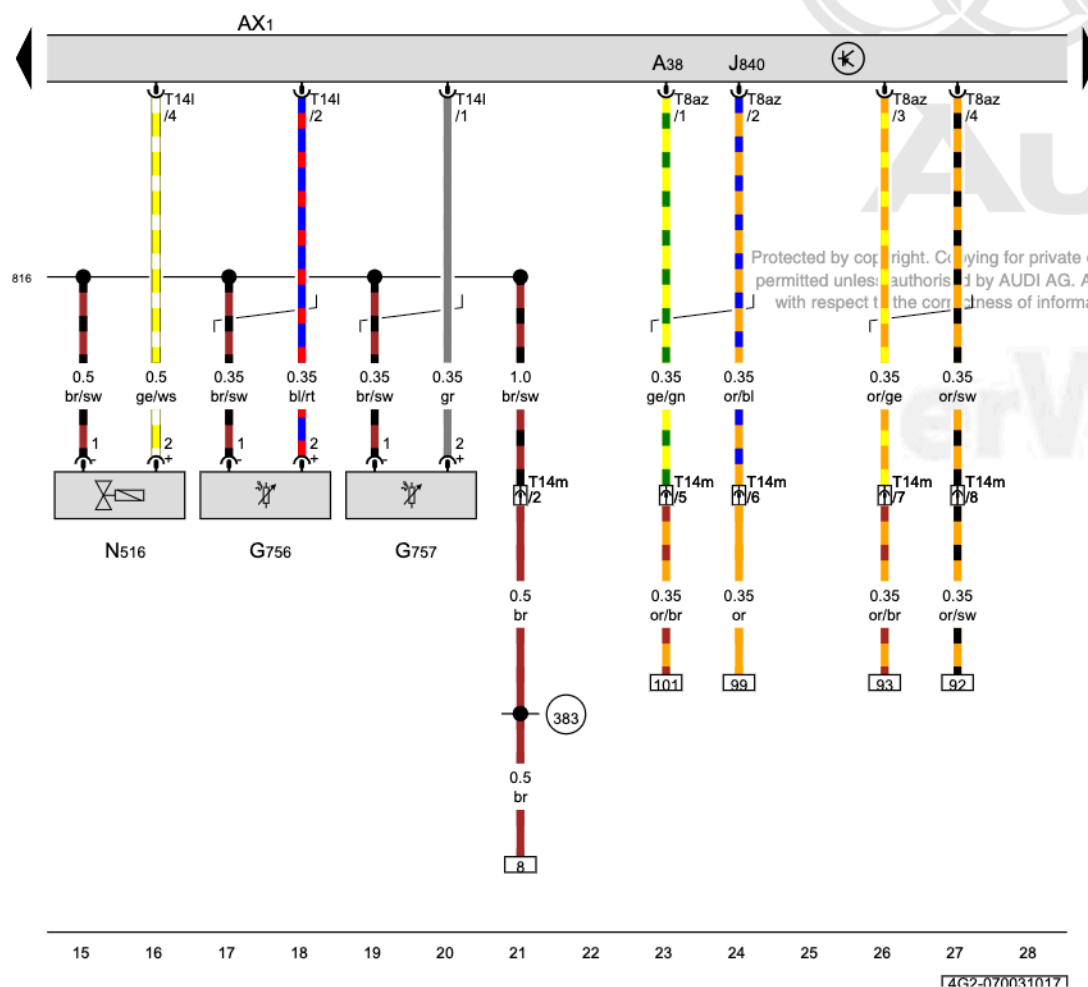

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

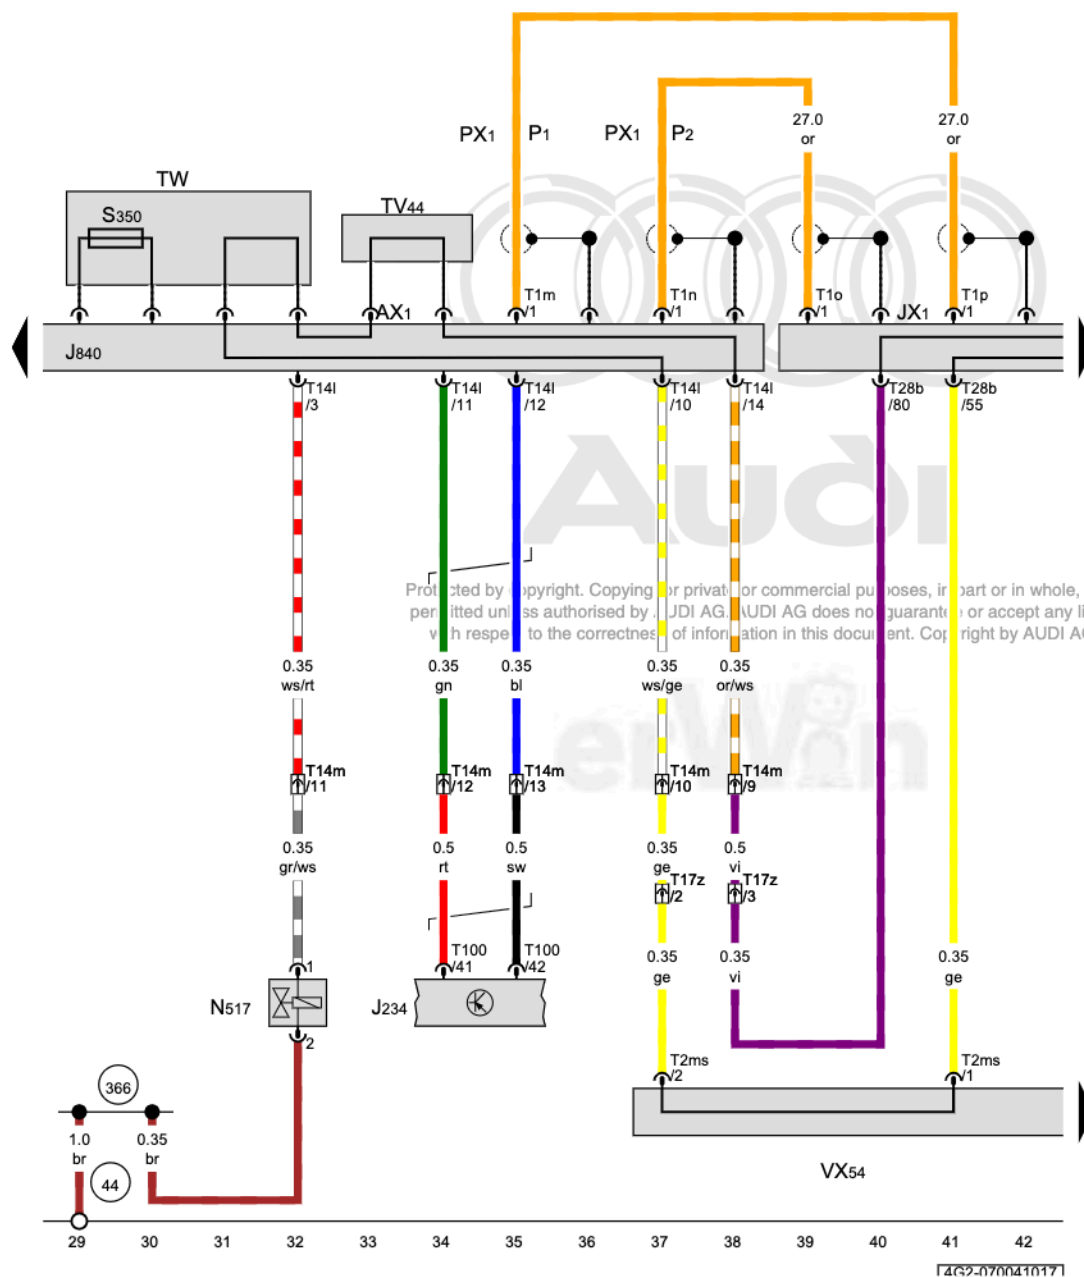


Hybrid Battery Unit, Electric Drive Power and Control Electronics, High-Voltage Wiring Harness for High-Voltage Battery, High-Voltage System Maintenance Connector, Three-Phase Current Drive


- AX1 Hybrid Battery Unit
- JX1 Electric Drive Power and Control Electronics
- J234 Airbag Control Module
- J840 Battery Regulation Control Module
- N517 Hybrid Battery Refrigerant Shut-Off Valve 2
- PX1 High-Voltage Wiring Harness for High-Voltage Battery
- P1 Hybrid Battery High-Voltage Cable, Positive Terminal
- P2 Hybrid Battery High-Voltage Cable, Negative Terminal
- S350 High-Voltage System Fuse 1
- T1m 1-Pin Connector
- T1n 1-Pin Connector
- T1o 1-Pin Connector
- T1p 1-Pin Connector
- T2ms 2-Pin Connector
- T14l 14-Pin Connector
- T14m 14-Pin Connector, In the Luggage Compartment, Spare Wheel Well
- T17z 17-Pin Connector, Brown
- T28b 28-Pin Connector
- TV44 Pilot Line Connector 1
- T100 100-Pin Connector
- TW High-Voltage System Maintenance Connector
- VX54 Three-Phase Current Drive

- 44 Ground Connection on A-Pillar, Lower Left
- 366 Ground Connection 1 (in Main Wiring Harness)

Drive Motor Temperature Sensor, Electric Drive Power and Control Electronics, Three-Phase Current Drive

- G712 Drive Motor Temperature Sensor
- JX1 Electric Drive Power and Control Electronics
- J841 Electric Drive Control Module
- SA3 Fuse 3 (On Fuse Panel A)
- SA8 Fuse 8 (On Fuse Panel A)
- T10ao 10-Pin Connector
- T28b 28-Pin Connector
- VX54 Three-Phase Current Drive
- D52 Positive Connection (15a) (in Engine/Motor Compartment Wiring Harness)
- * Refer to Applicable Engine Wiring Diagram

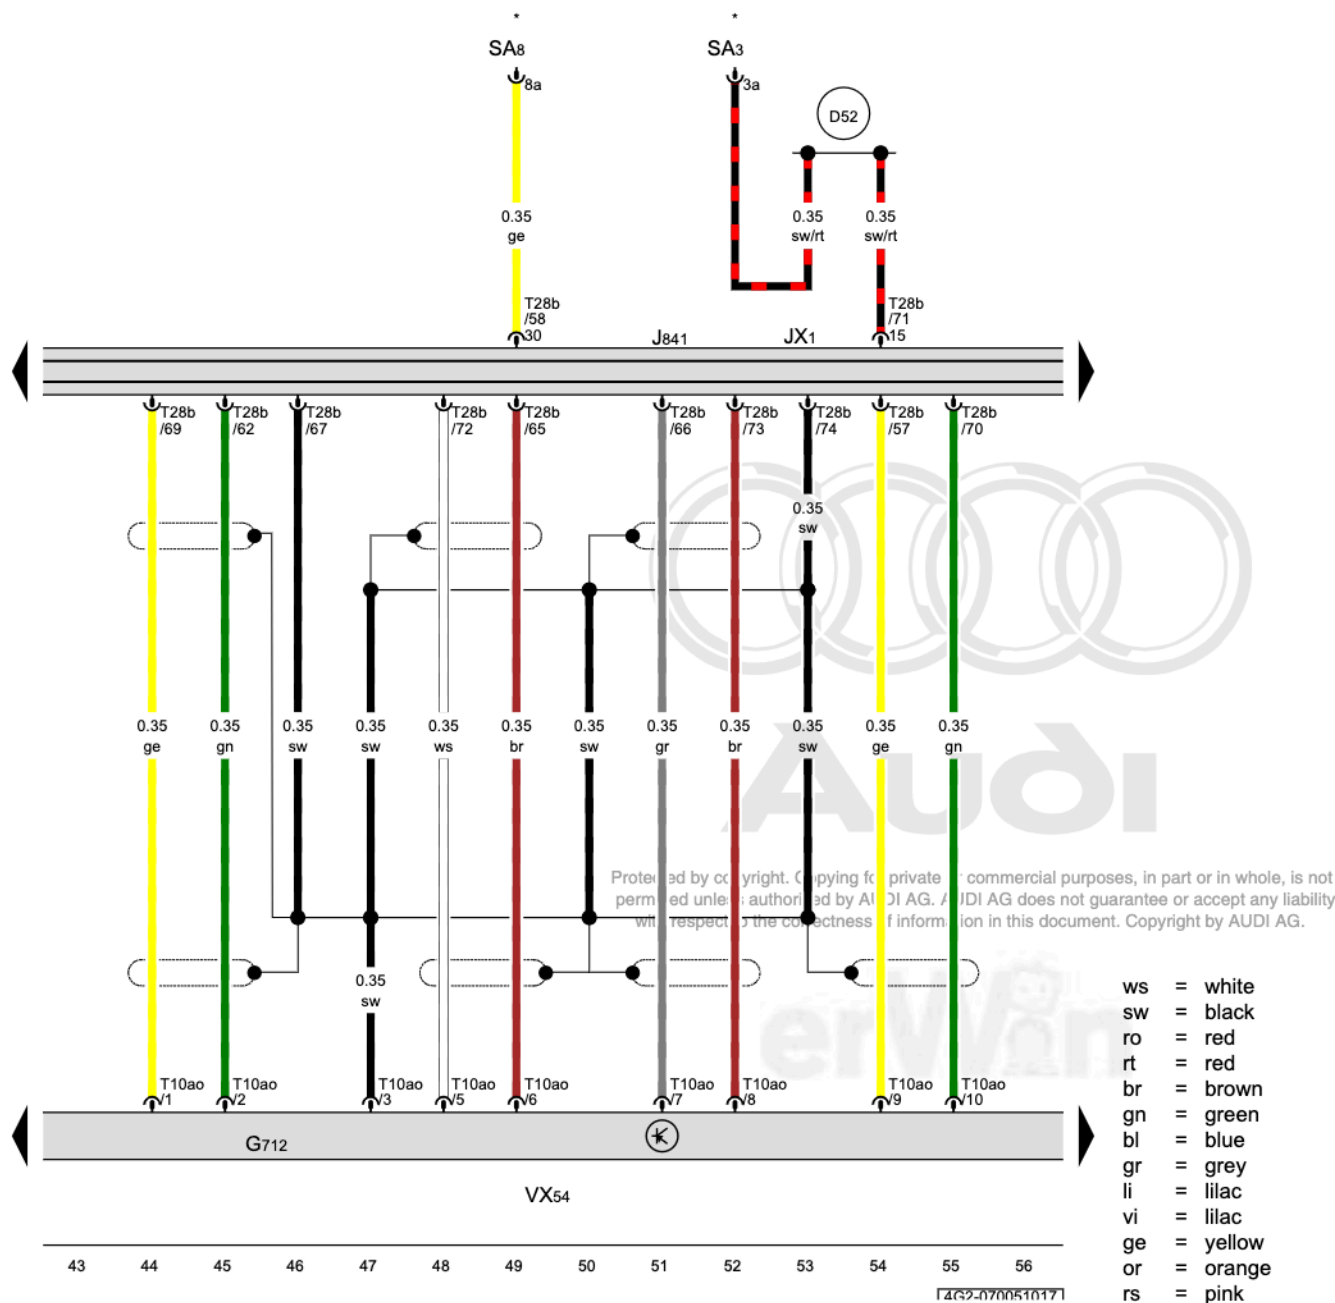

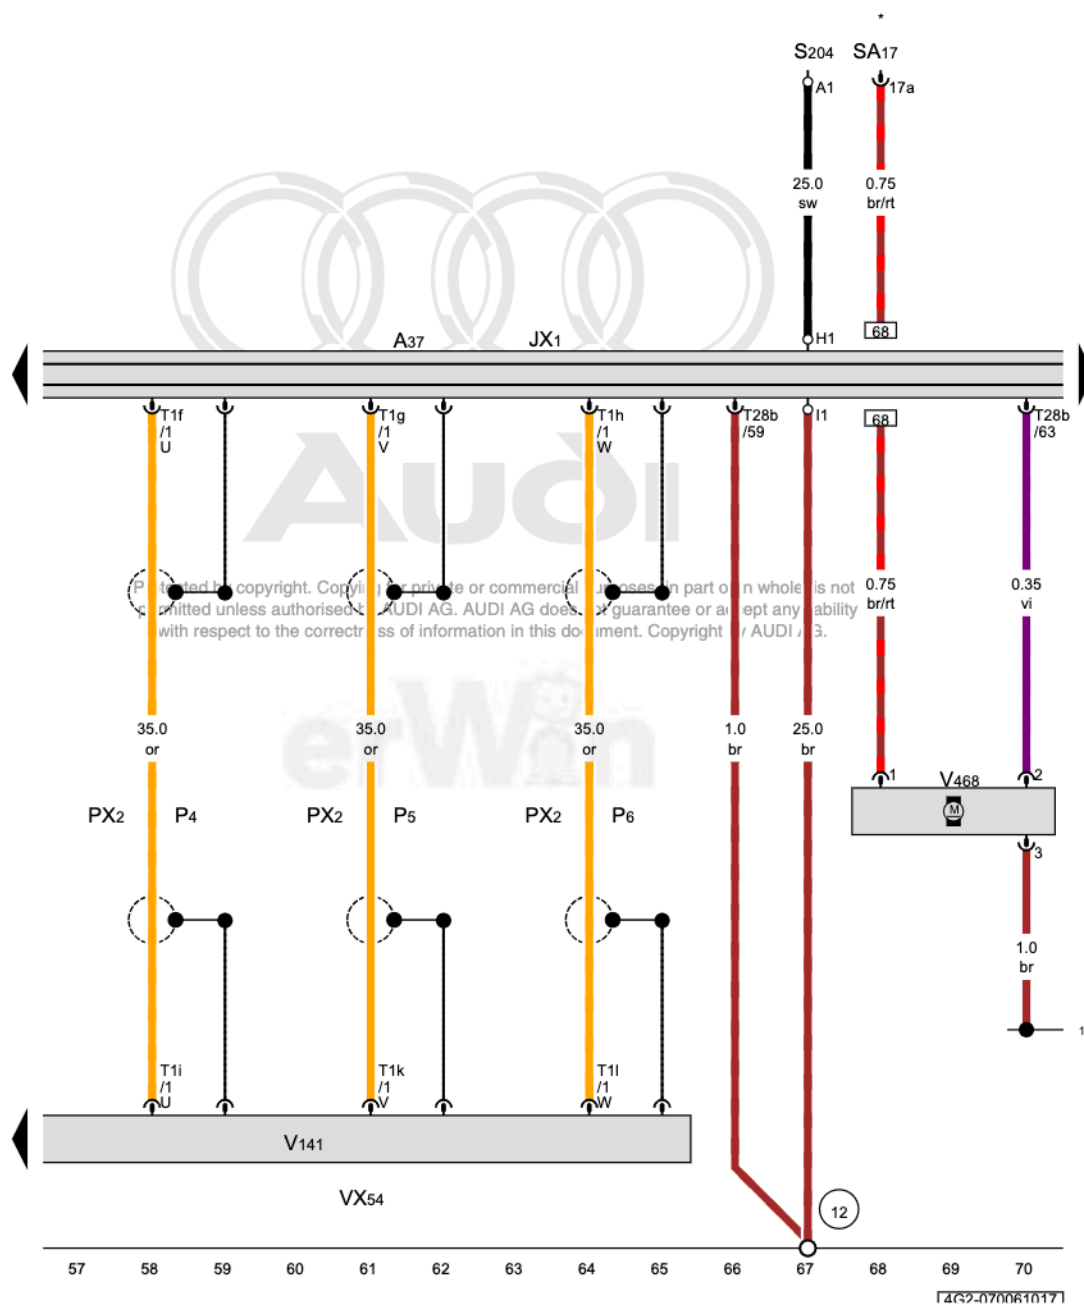


Drive Motor Inverter, Electric Drive Power and Control Electronics, Drive Motor High-Voltage Wiring Harness, Three-Phase Current Drive, Electric Drive Motor

- A37 Drive Motor Inverter
- JX1 Electric Drive Power and Control Electronics
- PX2 Drive Motor High-Voltage Wiring Harness
- P4 Drive Motor High-Voltage Cable 1
- P5 Drive Motor High-Voltage Cable 2
- P6 Drive Motor High-Voltage Cable 3
- SA17 Fuse 17 (On Fuse Panel A)
- S204 Fuse 1 (Terminal 30), In the Engine/Motor Compartment, Left Front
- T1f 1-Pin Connector
- T1g 1-Pin Connector
- T1h 1-Pin Connector
- T1i 1-Pin Connector
- T1k 1-Pin Connector
- T1l 1-Pin Connector
- T28b 28-Pin Connector
- VX54 Three-Phase Current Drive
- V141 Electric Drive Motor
- V468 Low Temperature Circuit Coolant Pump
- 12 Ground Connection in Engine/Motor Compartment, Left
- 132 Ground Connection 3 (in Engine/Motor Compartment Wiring Harness)
- * Refer to Applicable Engine Wiring Diagram

Voltage Converter, Electric Drive Power and Control Electronics, A/C Compressor Control Module, Electrical A/C Compressor High-Voltage Cable, Electrical A/C Compressor

- A19 Voltage Converter
- JX1 Electric Drive Power and Control Electronics
- J842 A/C Compressor Control Module
- P3 Electrical A/C Compressor High-Voltage Cable
- SA13 Fuse 13 (On Fuse Panel A)
- T4fp 4-Pin Connector
- T4fq 4-Pin Connector
- T8ba 8-Pin Connector
- T17z 17-Pin Connector, Brown
- V470 Electrical A/C Compressor

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of the information.

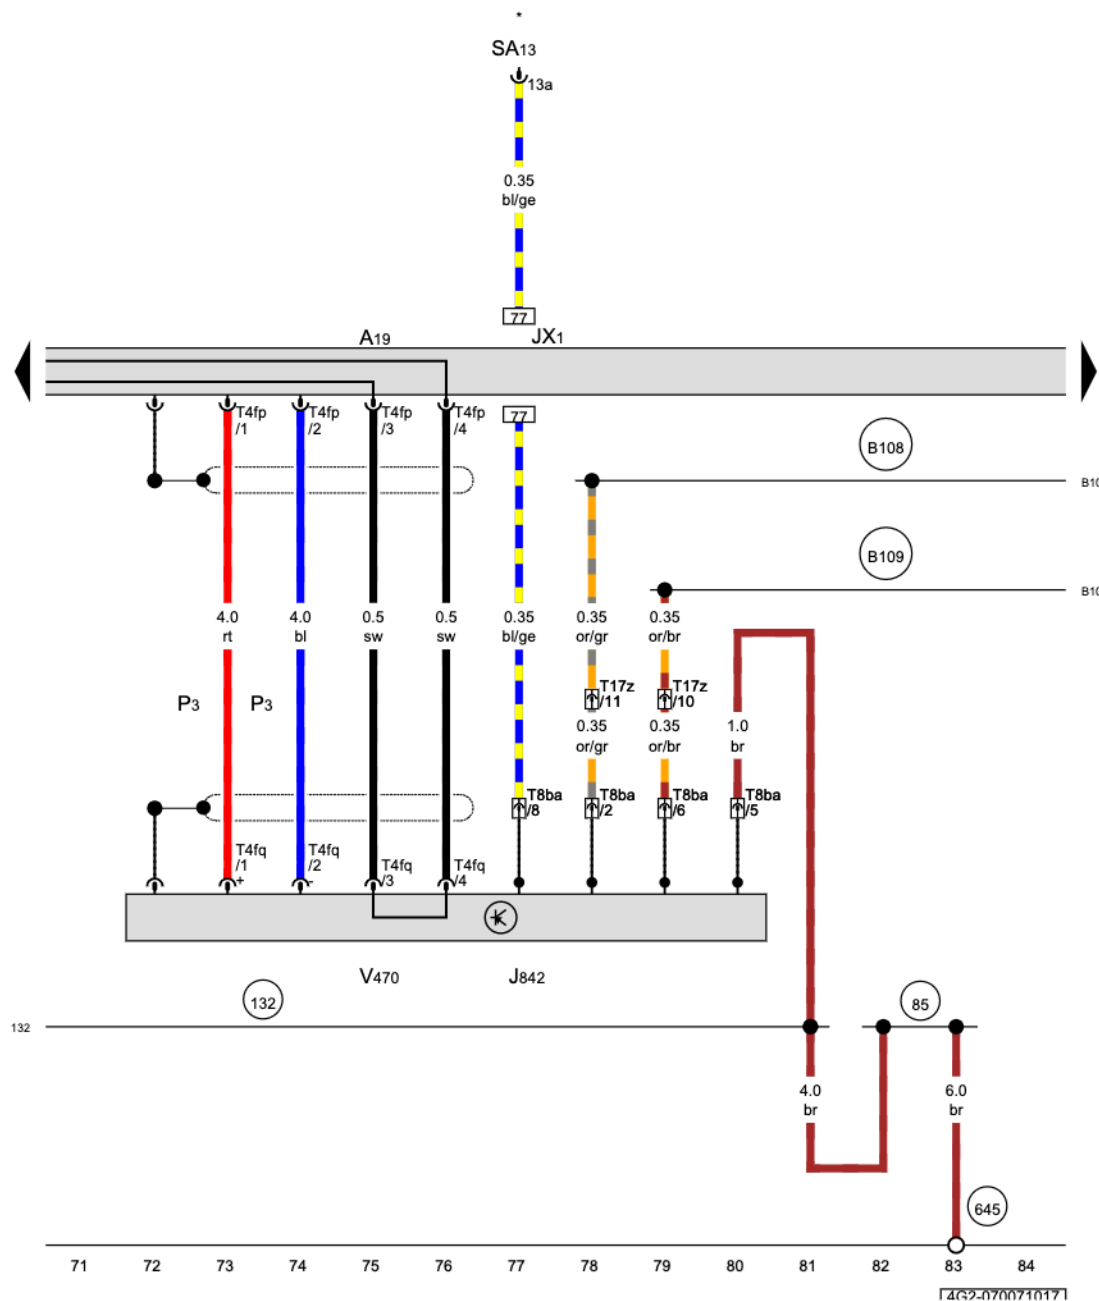


- 85 Ground Connection 1 (in Engine/Motor Compartment Wiring Harness)
- 132 Ground Connection 3 (in Engine/Motor Compartment Wiring Harness)
- 645 Ground Connection 1 on Bulkhead
- B108 CAN Bus Extended High Connection 1 (in Main Wiring Harness)
- B109 CAN Bus Extended Low Connection 1 (in Main Wiring Harness)
- * Refer to Applicable Engine Wiring Diagram

Electric Drive Power and Control Electronics, Data Bus on Board Diagnostic Interface, Powertrain CAN Bus High Wire Junction

- JX1 Electric Drive Power and Control Electronics
- J533 Data Bus on Board Diagnostic Interface
- T32b 32-Pin Connector
- T46b 46-Pin Connector
- TV33 Powertrain CAN Bus High Wire Junction
- TV37 Powertrain CAN Bus Low Wire Junction


- (B108) CAN Bus Extended High Connection 1 (in Main Wiring Harness)
- (B109) CAN Bus Extended Low Connection 1 (in Main Wiring Harness)
- (B383) Powertrain CAN Bus High Connection 1 (in Main Wiring Harness)
- (B390) Powertrain CAN Bus Low Connection 1 (in Main Wiring Harness)

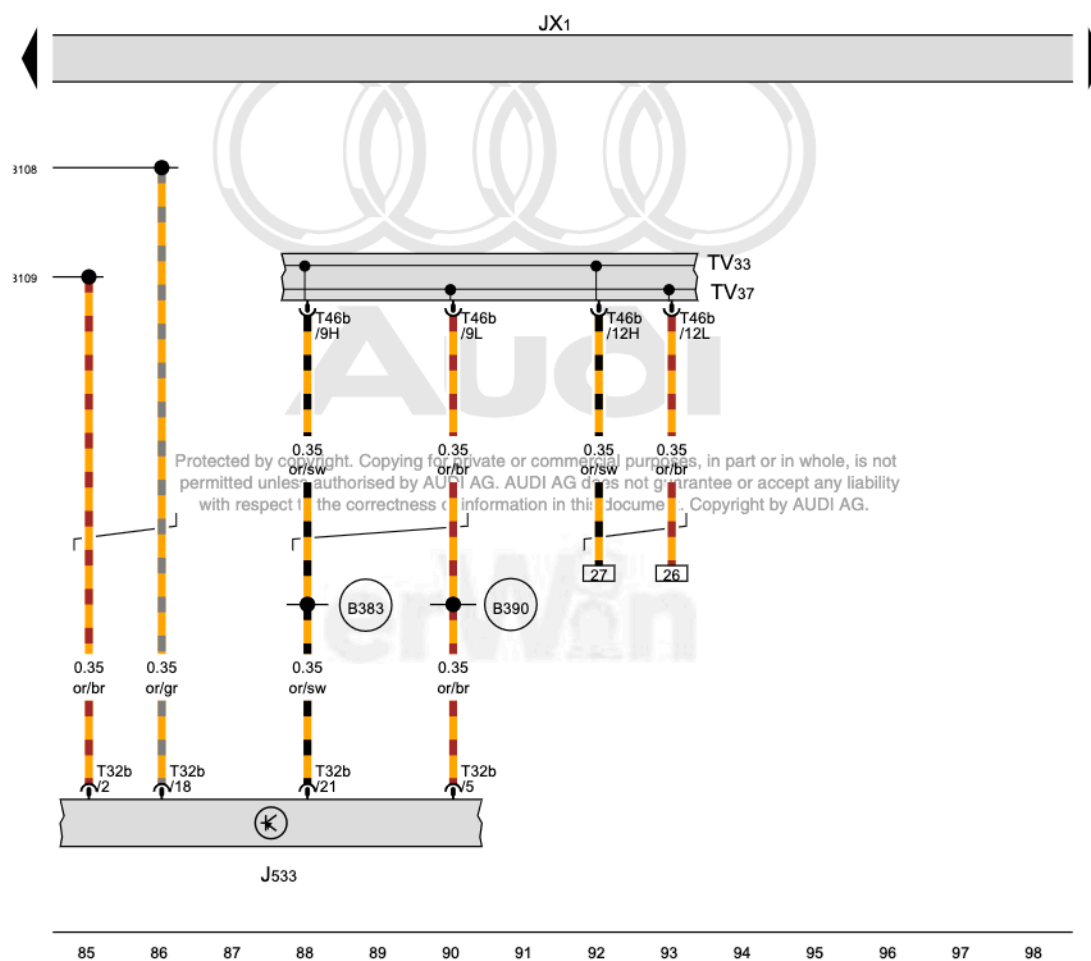

Electric Drive Power and Control Electronics, Engine/Motor Control Module

- C25 Intermediate Circuit Capacitor 1
- JX1 Electric Drive Power and Control Electronics
- J217 Transmission Control Module
- J623 Engine/Motor Control Module
- T16a 16-Pin Connector
- T17z 17-Pin Connector, Brown
- T28b 28-Pin Connector
- T91 91-Pin Connector

- E93 CAN Bus High Connection 1 (in Engine Wiring Harness)
- E94 CAN Bus Low Connection 1 (in Engine Wiring Harness)
- X4 CAN Bus Hybrid High Connection 1 (in Engine/Motor Compartment Wiring Harness)
- X5 CAN Bus Hybrid Low Connection 1 (in Engine/Motor Compartment Wiring Harness)

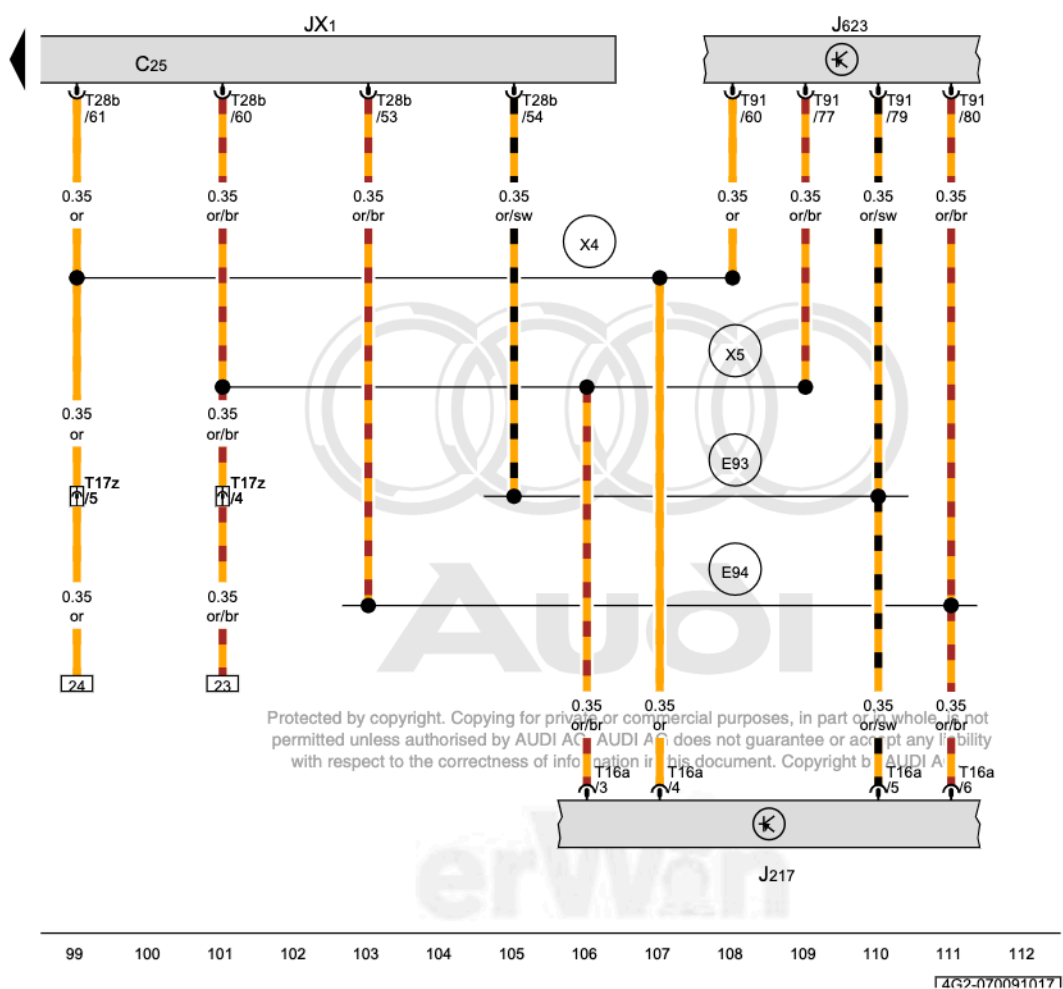


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Electric Drive Button

- E656 Electric Drive Button
- J519 Vehicle Electrical System Control Module
- T6ai 6-Pin Connector
- T10k 10-Pin Connector
- T32c 32-Pin Connector

- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- A175 Connection 58s (in Instrument Panel Wiring Harness)
- * Refer to Applicable Standard Equipment Wiring Diagram

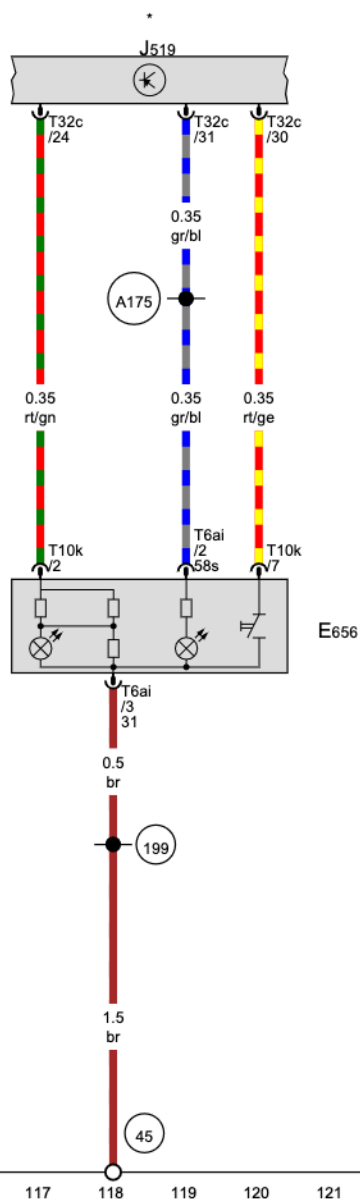

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink